



## Affordable Reliable Service

Factory 11 no 17-23 Keppel Drive Hallam 3803, Victoria

Ph. +61 3 9799 1999

Fax. +61 3 8786 3005

[warehouse@aggdoors.com.au](mailto:warehouse@aggdoors.com.au)

### Coding BOSS BOL12 (Forza) Transmitters

Follow the procedure below to memorize ROLLING CODE transmitters. To save FIX CODE transmitters follow the paragraph 4.7.5, then after memorize transmitters as indicated here below.

#### 1. Saving or Adding Remote Transmitters

- Press the S button until "0" appears
- Release the S button
- Press the button of the transmitter to be memorised
- The "0" on the display disappears, the transmitter has been saved
- For each transmitter (maximum 20) repeat the procedure for each single transmitter

BUZZER SIGNAL	MEANING
1 beep	code memorized
2 beeps	code already memorised
3 beeps	memory full

#### 2. Deletion of a single transmitter

- Press and hold both the P & S buttons for the next two steps
- Press the button of the transmitter to be deleted until the control unit emits a beeping sound
- Release the transmitter button
- This procedure will delete all the buttons regarding that transmitter

#### 3. Deletion of all transmitters

- Switch off the 240 Vac power supply
- Press and hold the S button
- Switch on the 240 Vac power supply while holding the S button for 5 seconds until you hear the 2 beeps from the control unit

#### 4. Wall switch and courtesy light programming

- Push S button until "0" appears
- Release S button
- Push S button again until "0" starts to flash
- Release S button
- In order to switch on the courtesy light push the remote control button or wall switch button to be memorized

N.B: Once activated the courtesy light will stay on for 180 sec; in case of reactivation the courtesy light counter will re-start from zero. It is possible to memorize just one button with the courtesy light function.