



## Affordable Reliable Service

Factory 11 no 17-23 Keppel Drive Hallam 3803, Victoria

Ph. +61 3 9799 1999

Fax. +61 3 8786 3005

[warehouse@aggdoors.com.au](mailto:warehouse@aggdoors.com.au)

### Coding Merlin M842-4/M83-4 & Compatible Transmitters



Your opener or receiver must learn the button from one of these remote controls

#### 1. Find the 'LEARN' button

##### ***On Overhead Door Openers***

With five exposed terminal screws at the rear.

- Remove the small black cover to the right of the terminal screws; 'LEARN' is the red button under the black cover.

With four screws at the rear, possibly covered with a plastic panel.

- Remove the lamp cover, then remove the red or green control panel cover and find the small button marked 'LEARN'.

With four covered terminal screws at the rear, and a Merlin wired wall control switch.

- The small button on the Merlin wall switch is the 'LEARN' button.

##### ***On Roller Door Openers***

With a single square red button on the front.

- Remove the lamp cover, and then remove the small black cover to the left of the lamp holder; 'LEARN' is the red button under the black cover.

With a large red or green push-switch on front.

- Remove the red or green control panel cover; find the small button marked 'LEARN'.

With a large red or green push-switch on front, and a Merlin wired wall control switch.

- The small button on the Merlin wall switch is the 'LEARN' button.

##### ***On Other Receivers***

A dark grey boxed receiver with a large round green button.

- The 'LEARN' button is the small dark grey button inside the green button.

Gate receiver cards.

- The 'LEARN' button is the tact switch on the PCB marked 'LEARN'.

Other receivers.

- See your receiver's user guide, or inspect for a button marked 'LEARN'.

## 2. Coding the remote to the opener

### ***To learn a remote button to operate the opener***

Press the 'LEARN' button for 1-2 seconds, until the courtesy lamp begins to flash slowly.  
Press the desired remote button, wait 1 second, then press the desired remote button again. The courtesy lamp will stop flashing once learning is complete.


### ***To learn one remote button to operate the opener and another to operate the lamp***

Press the 'LEARN' button for 1-2 seconds, until the courtesy lamp begins to flash slowly.  
Press the desired remote button for control of the opener, wait 1 second, then press the desired remote button for control of the courtesy lamp. The courtesy lamp will stop flashing once learning is complete.

**\*\*\*NOTE: Compatible remotes can't be programmed to use the courtesy lamp\*\*\***

### ***To delete all remote controls from the opener's memory***

Press and hold the 'LEARN' (or setup on some models) button for eleven (11) seconds, until the courtesy lamp stops flashing. After six (6) seconds it will flash fast as a warning. If you release the 'LEARN' (or setup) button during this warning period then the memory will not be wiped.

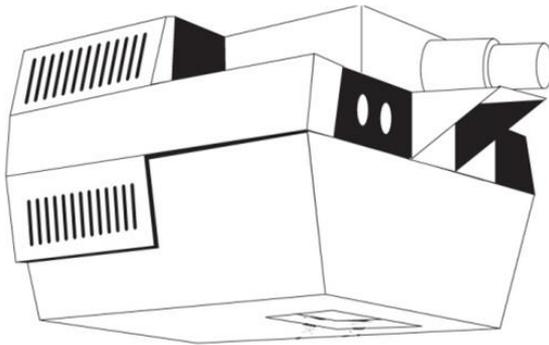

### **Overhead Openers**

Prolift 230T  
Powerlift 230T  
MT 230

### **Roller Door Openers**

Prolift 430R  
Powerlift 430R  
MR 430

