



**Affordable Reliable Service**

ABN 27 106 103 315

[www.aggdoors.com.au](http://www.aggdoors.com.au)

[enquiries@aggdoors.com.au](mailto:enquiries@aggdoors.com.au)

(03) 8789 1342



*Avanti Wireless Keypad*

## Changing the Combination

**Note:** The wireless keypad comes with 2 default combinations.

Combination channel 1: **11<**

Combination channel 2: **22>**

### Channel 1:

1. Press and hold "0" key, then momentarily press "<" key.
2. Release the "0" key.
3. Type in the default (or current combination) then press the "<" key.
4. Type in the new combination, (up to 8 numbers) then press the "<" key.
5. Re-type the new combination then press the "<" key to confirm.

### Channel 2:

This procedure is the same as channel 1, except we use the ">" key.

1. Press and hold "0" key, then momentarily press ">" key.
2. Release the "0" key.
3. Type in the default (or current combination) then press the ">" key.
4. Type in the new combination, (up to 8 numbers) then press the ">" key.
5. Re-type the new combination then press the ">" key to confirm.

